

SPRAY VALVE **DAS 30**

The micro-spray valve **DAS 30** is designed to obtain micro-spraying of various types of fluid.

The miniaturized size is perfect for compact layouts, and its design and strenght make it ideal for who is looking for a real cost-effective solution.

The spray valve **DAS 30** can be equipped with various kind of extensions, to fit perfectly any different application.



DAV TECH SRL

Via Ravizza, 30 36075 Montecchio Maggiore (VI) - ITALY Tel. 0039 0444 574510 Fax 0039 0444 574324

davtech@davtech.it www.davtech.it

FIELDS OF APPLICATION:

- > Oil and lubricants micro-spraying
- > Release agents micro-spraying
- > Aggressive agents micro-spraying

FEATURES:

- > Fine adjustment of the flow rate
- > Needle and nozzle in stainless stees
- Simple and cheap
- > Available in PEEK for reactive fluids
- Available with various extensions for any application.

Technical data

Model	DAS 30
Drive	Single acting
Weight	140g
Dimensions	40x25x25 mm
Max fluid pressure	Max 3 bar - MP version until 12 bar
Actuating air pressure	5-6bar
Atomizing air pressure	0,5 - 6 bar
Type inlet air	Tube 6x4mm
Type inlet fluid	Tube 6x4mm
Air cap	For round or flat spray
Speed	Until 200 cycle/min
Adjusting	Micrometric
Used materials	Stainless steel
Fluids to be dispensed	Oil, lubrificants, release agents, thread-lockers (PEEK Version) etc

EXTENSIONS DAS 30

The valve DAS 30 is equipped upon request with extensions, for example for radial spraying. The extensions are available with a lenght between 100 and 600 mm and allow a 360° spraying, without contact, with the result of a fine coating or the area, with a fixed amount of fluid.



DAS 30 PEEK

In this version the valve DAS 30 is able to spray reactive fluids, such as anaerobic fluids (thread lockers for example). This solution is perfect when is needed to cover a certain area with a film of fluid, and a single drop in the middle is not enough.



DAS 30 SENS

The valve DAS 30 can be equipped with an inductive proximity sensor, that is able to check the right opening and closing of the valve. The sensor is mounted on the fluid adjusting, and is not needed to change its position when the adjustment is changed.



Valve configurations





